

PORTABLE TYPE ULTRASONIC FLOWMETER

Easy Measurement Anytime Anywhere

- ✓ Compact and Lightweight—Only 1 kg
- ✓ Easy-to-Install Detector
- ✓ Consumed Energy Calculation



Clamp-on Detector & Portable Transmitter

You can start measurement anytime you wish without interrupting the plant operation



Flow transmitter (FSC)

Display

- 1 Date & time
- 2 SD memory card
- 3 Measurement mode
- 4 AI/AO status
- 5 Ultrasonic signal level indicator
- 6 Battery indicator
- 7 Site name
- 8 Quick logger start/stop button
- 9 Kind of data
- 10 Switch to graph view
- 11 Unit
- 12 Totalizer reset
- 13 Totalizer ON/OFF
- 14 Measurement status

Operation keys

- 15 Power ON/OFF
- 16 Backlight ON/OFF
- 17 Print out or data-saving on SD card
- 18 Charging status
- 19 Power supply
- 20 ▲ Up key
- 21 ▼ Down key
- 22 ◀ Left key
- 23 ▶ Right key
- 24 Escape key
- 25 Enter key
- 26 Menu key


Side

- 27 Downstream sensor
- 28 Upstream sensor
- 29 AI/AO
- 30 12 V DC power

Select the best configuration for your application

Transit time difference: V method

Principle

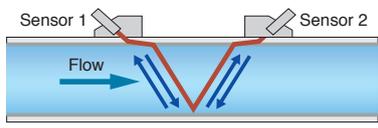


A pair of sensors aligned on the outside wall of a pipe. The sensors emit ultrasonic pulse in turn, and detect the transit time difference of the pulse, by which the flow rate is calculated.

Detectors

	Appearance	Model	Pipe diameter (mm)	Fluid temperature (°C)
For small diameter pipes		FSSD	13 to 100	-40 to +100
Extendable rail type		FSSC	50 to 600	-40 to +120
For large pipes		FSSE	200 to 3000	-40 to +80
For high temperature		FSSH	50 to 250	-40 to +200


Transit time difference: Z method

Principle

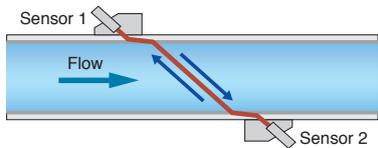


A pair of sensors installed on the outside wall of a pipe, facing each other slantingly. The sensors emit ultrasonic pulse in turn, and detect the transit time difference of the pulse. This method is used mainly when the V method is not available due to the space limitation, or when the fluid has high turbidity.

Detectors

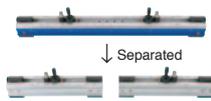	Appearance	Model	Pipe diameter (mm)	Fluid temperature (°C)
For small diameter pipes		FSSD	150 to 300	-40 to +100
Extendable rail type		FSSC	200 to 1200	-40 to +120
For large pipes		FSSE	200 to 6000	-40 to +80
For high temperature		FSSH	150 to 400	-40 to +200

Pulse doppler method: for real-time flow profile analysis

Principle

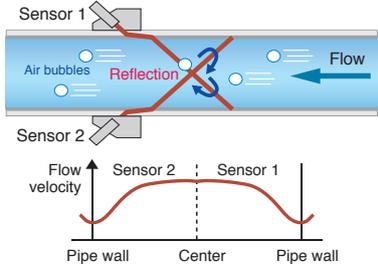

The frequency of ultrasonic pulses reflected by air bubbles or solid particles changes according to the flow velocity. The pulse doppler flowmeter uses this frequency shift to determine the flow velocity profile.

Detectors

	Appearance	Model	Pipe diameter (mm)	Fluid temperature (°C)
Small		FSDP2	40 to 200	-40 to +100
Middle		FSDP1	100 to 400	-40 to +80
Large		FSDP0	200 to 1000	-40 to +80

Designed for Ease-of-Use


Easy Measurement Anytime Anywhere

Handy and battery-powered design allows you to take measurement when and where needed.



Real-Time Monitoring of Flow Profile

Using the flow transmitter FSC in combination with the optional pulse doppler detector (FSD) enables real-time monitoring of flow profile (option).

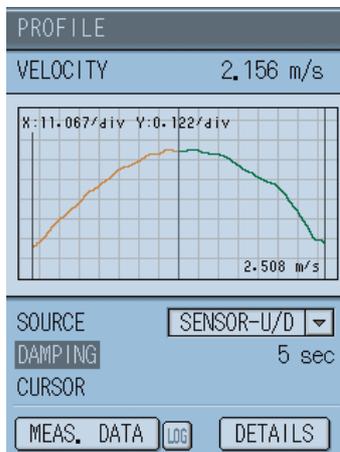

Flow profile indication

Carrying Case

The dedicated case accommodates all the necessary equipment including:

- Flow transmitter
- Detector (FSSC or FSSD)
- Acoustic coupler (silicone grease)
- Signal cable
- Analog I/O cable
- Strap
- AC power adapter
- Power cable
- Mounting belt
- USB cable
- CD-ROM (instruction manual, parameter loader software)




Carrying case

Consumed Energy Calculation

A function to obtain thermal energies exchanged via fluid used in air-conditioning systems. The transmitter calculates the consumed thermal energy based on the forward flow temperature, the return flow temperature, and the flow rate.

4–20 mA DC output (1 point)

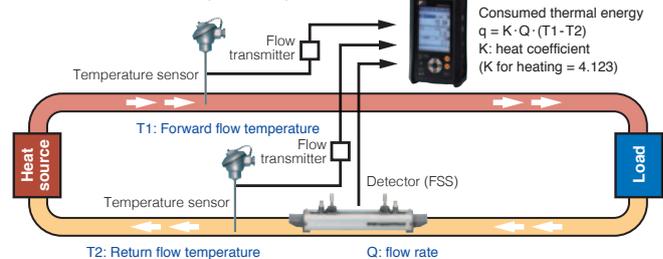


Data Management on PC


Data in SD card can be transmitted to your PC through a USB cable.

Loader software provided

Parameter setting screen

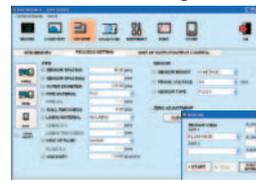

Flow trend screen

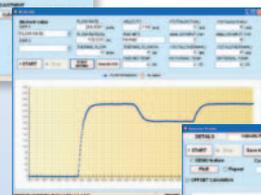


Flow profile screen



Data Storage on SD Card

The transmitter automatically saves the measured data on SD memory card at user-specified cycle. You can also send the data through USB port to your PC.

For example, a 512 MB memory card can store the data of two years' worth (at a data save cycles of 30 s, 14 kinds of data). SD card up to 8 GB can be used.

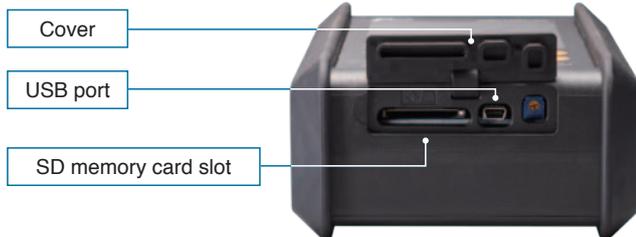


Easy-to-Mount Detector

Mounting detector requires no tools. You can start measurement anytime.



Multilingual Display

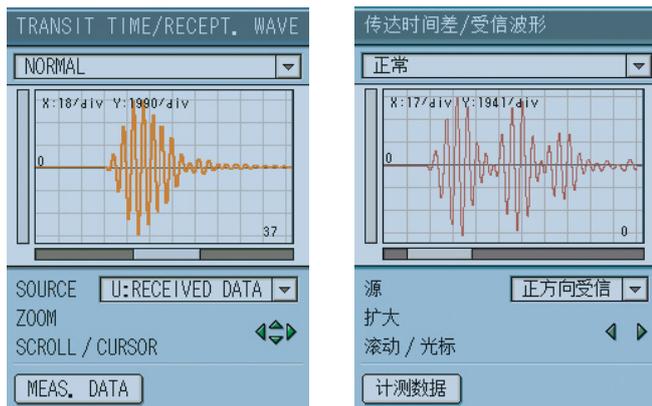

English

Chinese

12 Hours of Continuous Operation with Built-in Battery


FSC can serve long hours of outdoor measurement.

On-Site Printing

You can print out the measured data or screenshot by the dedicated printer (option).



Easy-to-See LCD

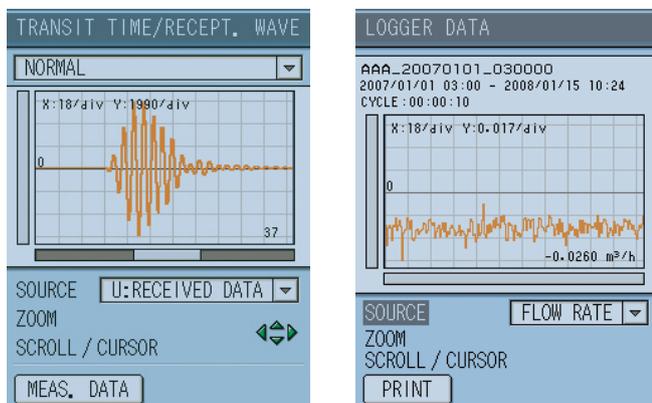



Received waveform

Logger data

Applications


Reduction of Water Used in Plant Utilities

Visual depiction of a facility's water use results in more effective management of water consumption.

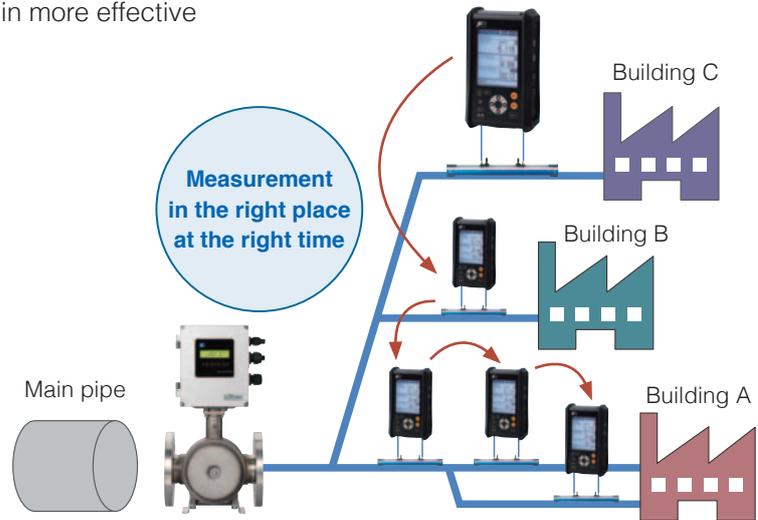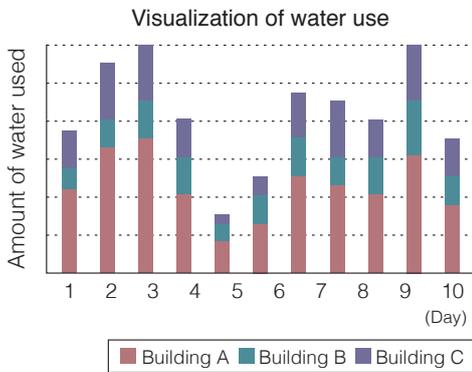

Energy Consumption in Air-Conditioning Systems

Calculates the thermal energy received and sent with liquid in air-conditioning system.

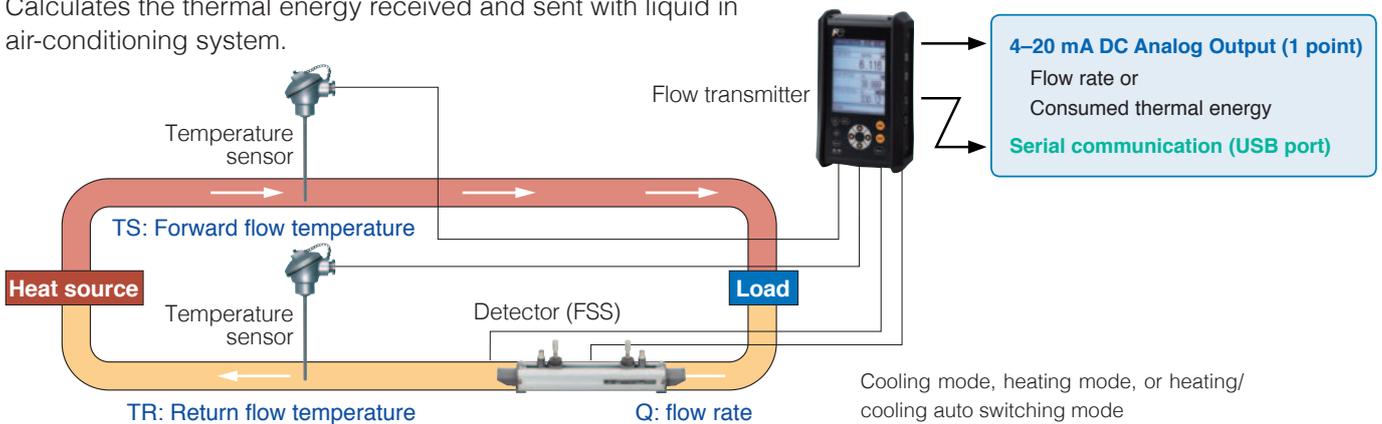


Corrosive Fluid

Ultrasonic flowmeters can take measurement on glass, metallic, and plastic pipes.



Wash Water in Food Manufacturing Plants

Easier installation and lower maintenance compared to mechanical flowmeters or Coriolis flowmeters

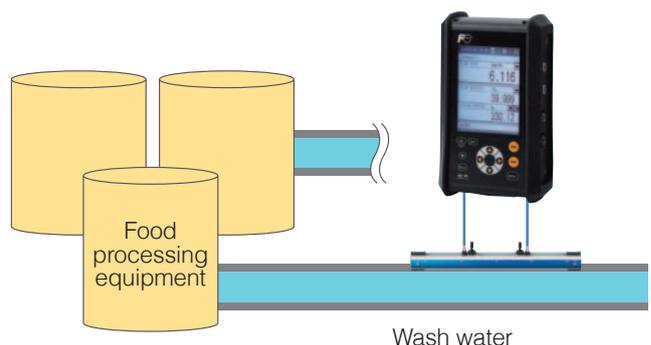

Ordering Code Select a code for each digit to configure the model for your application.

F S C S

5	6	7	8
			2

 -

9	10	11
	0	

F S S

4	5	6	7	8
				1

 -

9	10

Flow transmitter

Digit	Specifications	Code
5	Transmitter unit	
	Standard unit	1
	Standard unit + printer	2
6	Flow velocity profile	
	None	0
	With (A detector for flow velocity profile measurement is required)	1
7	AC power adapter + cable	
	125 V AC (Japan, North America)	A
	250 V AC (EU, Korea)	B
	250 V AC (China)	C
8	Revision code	2
9	SD memory card	
	None	0
	With (512 MB)	1
11	Instruction manual / default language setting	
	None / English	Y
	With / Japanese	J
	With / English	E
	With / Chinese	C

Detector (transit time difference method)

Digit	Specifications	Code
4	Type	
	Extendable rail type	C
	For small diameter pipes	D
	For large pipes	E
	For high temperature	H
5	Guide rail	
	Standard	1
	Long (for detector for small diameter pipes)	3
6	Mounting belt *1	
	None	Y
	Stainless belt (for pipe diameters ≤ 300 mm)	A
	Plastic cloth belt (for pipe diameters ≤ 300 mm)	B
	SS belt with screws (for pipe diameters ≤ 600 mm)	C
	Wire (for pipe diameters ≤ 1500 mm)	D
	Wire (for pipe diameters ≤ 6000 mm) for detector for large diameter pipes	E
7	Acoustic coupler	
	None	Y
	Silicone-free grease	B
	Silicone grease*2	C
	Grease for high temperature (for detector for high temperature)	D
8	Revision code	1
9	Waterproof treatment *submersible for 5 days	
	None	Y
	With (10-meter signal cable included) available for FSSC and FSSE	B
10	Tag plate	
	None	Y
	Stainless steel tag plate	A

*1: Select an appropriate mounting belt in 6th code in reference to the following table.

Mounting method	≤ 300 mm	≤ 600 mm	≤ 1200 mm
V method	A, B, or C	C	D
Z method	C	D	D

*2: Normally, select the silicone grease as an acoustic coupler. A silicone grease comes in a 100 gram tube.

Detector (pulse doppler method, for flow velocity profile measurement)

Model	Specifications
FSDP20Y1	Small (40 mm to 200 mm)
FSDP10Y1	Middle (100 mm to 400 mm)
FSDP00Y1	Large (200 mm to 1000 mm)

Scope of Delivery

Flow transmitter (FSC)	1. Transmitter unit 2. AC power adapter with AC/DC conversion cable 3. Power cable 4. Analog I/O cable (1.5 m) 5. USB cable (1 m) 6. Carrying case 7. Strap 8. Signal cable (5 m × 2) 9. CD-ROM (instruction manual, parameter loader software) Option (as specified by order) 1. SD memory card (512 MB) 2. Printer (with 1 roll of paper) 3. Instruction manual
Transmit time method flow detector (FSS)	1. Detector unit 2. Signal cable conversion cable (provided when the detector is FSSE) 3. Mounting belt or wire (as specified by order) 4. Acoustic coupler (as specified by order)
Pulse doppler flow detector (FSDP)	1. Detector unit 2. Mounting belt or wire 3. Silicone grease (100 g)


* Parameter loader software is available from our website at:
<http://www.fujielectric.com/products/instruments/>

Specifications

Fluid	Uniform liquid through which ultrasonic wave can propagate (water, distilled water, alcohol, milk, etc.)
Pipe inner diameter	13 mm to 6000 mm (depending on detector)
Fluid temperature	-40°C to +200°C (depending on detector)
Velocity	0 to ±32 m/s (minimum ±0.3 m/s)
Accuracy	±1.0% of rate (depending on flow velocity)
Output cycle	1 s
Path	1 path, transit time method
Display	Color LCD with back light
Analog output	4–20 mA DC (1 point)
Analog input	4–20 mA DC / 1–5 V DC (2 points)
Power supply voltage	Built-in battery (12 hours of continuous operation)
Transmitter enclosure	IP64 (no printer version)
Transmitter dimensions	210 × 120 × 65 mm (no printer version)
Transmitter weight	Approx. 1 kg
SD card	512 MB (stores 2 years' worth data)

Serial communication	Transmission data: Data stored in SD card (instantaneous value, total value, etc.) Through USB port Cable length: up to 3 m
Functions	Damping time constant (0 to 100 s) Instantaneous value (10-digit) *The flow rate unit is selectable Total value (10-digit) *The flow rate unit is selectable Consumed energy calculation Self-diagnosis (battery power, received wave) Flash memory (measurement parameters for pipe, fluid, sensor, etc) Number of registration sites: 32 Zero point adjustment (by setting zero or clearing zero) Graph view, waveform view Language (Japanese, English, German, French, Spanish, Chinese) Bidirectional flow measurement Low flow cut-off (0–5 m/s)
Options	With printer: screen hard copy, periodic printing and logged data printing Doppler velocity profile: displays flow velocity profile of instantaneous value and average value

Dimensions

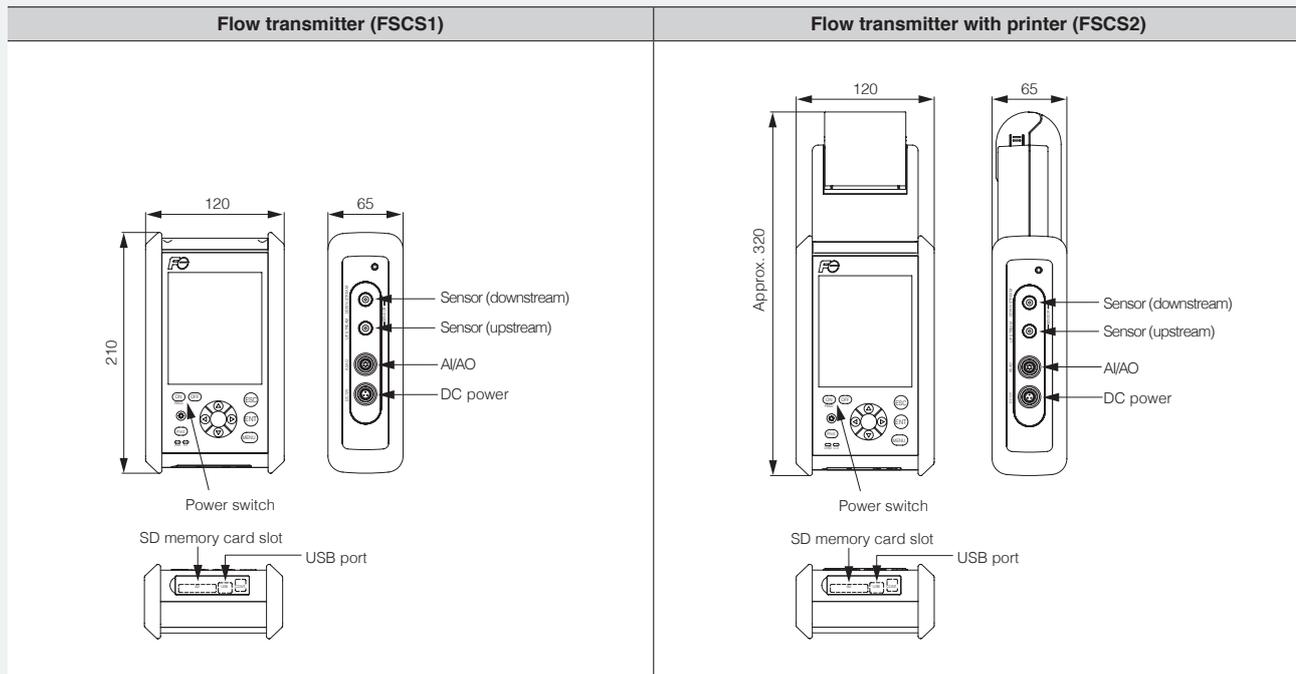

⚠ Caution on Safety

Before using products in this catalog, be sure to read their instruction manuals.

Fuji Electric Co., Ltd.

Global Sales Section
Instrumentation & Sensors Planning Dept.
1, Fuji-machi, Hino-city, Tokyo 191-8502, Japan
<http://www.fujielectric.com>
Phone: +81-42-514-8930 Fax: +81-42-583-8275
<http://www.fujielectric.com/products/instruments/>

Autorizovaný distributor pro ČR a SR



Amtek, spol. s r.o.
Videňská 125, 629 00 Brno
Tel.: 547 125 555 Fax: 547 125 556
mail: fuji@amtek.cz
<http://www.amtek.cz/fuji>